

Стандартные технические приемы, используемые на станции технического обслуживания

Vehicle in Workshop

When working on a vehicle in the workshop always make sure that:

- Where practicable, the parking brake is applied and the wheels are securely chocked to prevent the vehicle moving forwards or backwards.
- Whenever possible, the ignition key is removed before any work is carried out on the vehicle.
- If the engine is to be run, there is adequate ventilation, or an extraction hose is used to remove exhaust fumes.
- There is adequate room to raise the vehicle and remove the wheels, if necessary.
- Fender covers are always fitted if any work is to be carried out in the engine compartment.
- Where practicable, the battery is disconnected if working on the engine, underneath the vehicle, or if the vehicle is raised.



ВНИМАНИЕ: Prior to disconnecting the battery, refer to the Electrical Section of this manual - Battery disconnection/connection and the following paragraphs. Для получения дополнительной информации обратитесь к [Specifications](#) (414-00 Charging System - General Information)



ВНИМАНИЕ: When electric arc welding on a vehicle, always disconnect the generator wiring to prevent the possibility of a surge of current causing damage to the internal components of the generator.

- If using welding equipment on the vehicle, a suitable fire extinguisher is readily available.

Battery - General



ПРЕДОСТЕРЕЖЕНИЕ: It is essential that a period of 10 minutes elapses after the battery is disconnected before any work is undertaken on any part of the SRS system.



ВНИМАНИЕ: Prior to carrying out any procedures which involve disconnecting/ or connecting the battery, refer to the Electrical Section of this manual - Battery disconnection/connection. Для получения дополнительной информации обратитесь к [Specifications](#) (414-00 Charging System - General Information)



ВНИМАНИЕ: A discharged battery condition may have been caused by an electrical short circuit. If this condition exists there will be an apparently live circuit on the vehicle even when all normal circuits are switched off. This can cause arcing when the jumper cables are connected.

Jump Starting a Vehicle



ВНИМАНИЕ: While it is not recommended that a vehicle is jump started, it is recognized that this may occasionally be the only practical way to mobilize a vehicle. Reference should be made to the following and also to the Electrical Section of this manual - Jump Starting.



ВНИМАНИЕ: It is advisable not to use starter/charger sets for jump starting but if this is unavoidable, ensure that the sets are not used in the 'START' mode.

- Always make sure that the jumper cables are adequate for the task.
- Always make sure that the slave battery is of the same voltage (12 volts) as the vehicle battery. The batteries must be connected in parallel.
- Ensure that the battery terminals of both batteries are fully tightened.
- Where another vehicle is used to jump start a disabled vehicle, ensure that the two vehicles are not touching.
- It is advisable that the engine of the donor vehicle is switched off during jump starting; take care to ensure that the battery of the donor vehicle does not also become discharged.
- Always make sure that switchable electric circuits are OFF before connecting jump cables. This reduces the risk of arcing occurring when the final connection is made.

Following jump starting of a disabled vehicle, the discharged battery must be checked for serviceability and recharged as soon as possible to avoid permanent damage.

Do not rely on the generator to restore a discharged battery. For a generator to recharge a battery, it would take in excess of eight hours continuous driving with no additional loads placed on the battery.

Trickle charging (defined as voltages <16 volts) may be carried out with the battery connected. Ensure that the battery terminals are fully tightened prior to trickle charging.



ВНИМАНИЕ: Boost charging may only be carried out with the battery disconnected from the vehicle.

Towing the Vehicle



ПРЕДОСТЕРЕЖЕНИЕ: When towing is necessary, reference must be made to the Jacking, Lifting and Towing Section of this Manual. When the vehicle is being towed the ignition switch must be in position II (steering lock released and warning lights illuminated). Only then will the steering, turn signal lamps, horn and stop lamps be operational. Failure to follow these instructions may result in personal injury. It must be noted that with the engine not running, the power steering and brake booster will be inoperative therefore, greater effort will be needed to steer the vehicle and apply the brakes.

General Fitting Instructions

Component removal

Whenever possible, clean components and the surrounding area before removal.

- Blank off openings exposed by component removal.
- Following disconnection, seal fuel, oil or hydraulic lines immediately using suitable blanking plugs or caps.
- Seal open ends of exposed oilways using suitable tapered hardwood plugs or conspicuous plastic plugs.
- Immediately a component is removed, place it in a suitable container; use a separate container for each component and its associated parts.
- Clean bench and provide marking materials, labels and containers before disassembling components.

Disassembling

Observe scrupulous cleanliness when disassembling components, particularly when brake, fuel, air suspension or hydraulic system parts are disassembled. A particle of dirt or cloth fragment could cause a serious malfunction if trapped in these systems.

- Blow out all tapped holes, crevices, oilways and fluid passages with dry, compressed air.



ПРЕДОСТЕРЕЖЕНИЕ: Suitable eye protection must be worn.

- Discard all seals and 'O' rings and replace with new when reassembling.
- Use suitable marker ink to identify mating parts, do not use a scribe or centre punch as they could initiate cracks or distortion.
- Wire or tape mating parts together where necessary to prevent accidental interchange.
- Suitably identify parts which are to be renewed and to those parts requiring further inspection. Keep these parts separate.
- To ensure that the correct replacement part has been obtained, do not discard a part due for renewal until after comparing it with the new part.

Cleaning components

Always use cleaning agents which are suitable for the work being undertaken and the components being cleaned. NEVER use gasoline (petrol) as a cleaning agent (degreaser). Always ensure that the component being cleaned is compatible with the cleaning agent.

Always follow the manufacturer's instructions regarding the use of cleaning agents and ensure that the environment in which the work is being undertaken is suitable. See Health and Safety Precautions for further information regarding cleaning.

General inspection of components

All components should be inspected for wear or damage before reassembling.

- Always ensure that component to be inspected is clean and free from oil or grease.
- When a component is to be checked dimensionally against design specified values, use the appropriate measuring equipment i.e. micrometers, verniers, surface plates, dial test indicators (DTI).
- Always ensure that all measuring equipment is correctly calibrated before use.
- Reject a component which is not within specified values/limits or if it appears to be damaged.
- A component may be refitted if dimensions obtained during checking are at the maximum tolerance limit and it is in an undamaged condition.
- Bearing journal clearances should be checked where necessary using Plastigage.

Joints and Joint Faces

All gaskets should be fitted dry unless stated otherwise. Always fit new 'O' rings when reassembling components, always apply the specified lubricant to 'O' rings and fit 'O' rings using the fingers only.

Use gasket removal spray and/or plastic scrapers to remove traces of old gasket.



ВНИМАНИЕ: DO NOT use metal scrapers or emery cloth as these may damage the sealing surfaces.

Many joints use sealants instead of gaskets as the sealing medium. Where this is the case, the sealant together with its part number will be found listed in the relevant repair operation and also in the sealants table.



ВНИМАНИЕ: Always remove all traces of the old sealant prior to reassembly. Use plastic scrapers, specified solvents where available or dry, lint free cloth. DO NOT use metal scrapers or emery cloth as these may damage the sealing surfaces. Ensure that sealing surfaces are free from oil or grease as sealants will not adhere properly to contaminated surfaces.

Do not allow sealant to enter tapped holes or oilways.

Locking Devices

Always replace locking devices with one of the same design and of the correct size.

Tab washers

Always release locking tabs before loosening fixings, do not re-use tab washers.

Locknuts

Always use a backing spanner when loosening and tightening locknuts, brake and fuel pipe unions.

Roll pins

Always fit new roll pins of the correct size.

Circlips

Always fit new circlips ensuring that they are of the correct size for the groove.

Woodruff keys

Woodruff keys may be re-used provided there is no indication of wear or distortion.

Remove any burrs from edges of keyways using a fine file.

Split pins

Never attempt to straighten and re-use a split pin, always ensure that replacement pins are of the correct size for the hole in which they are to be fitted.

Screw Threads

- Damaged nuts, bolts and screws must always be discarded. Attempting to recut or repair damaged threads with a tap or die impairs the strength and fit of the threads and is not recommended.

ПРИМЕЧАНИЕ:

During certain repair operations, it may be necessary to remove traces of thread locking agents using a tap. Where this is necessary, the instruction to do so will appear in the relevant operation and it is essential that a tap of the correct size and thread is used.

- Some bolts are coated with a thread locking agent and unless stated otherwise, they must not be re-used. New bolts having the same part number as the original must always be fitted. When nuts or bolts are to be discarded, the repair operation and relevant torque chart will include an instruction to that effect. Do not use proprietary thread locking agents as they may not meet the specification required. See also Encapsulated ('Patched') Bolts and Screws.
- Always ensure that replacement nuts and bolts are at least equal in strength to those that they are replacing. Castellated nuts must not be loosened to accept a split pin except in recommended cases when this forms part of an adjustment.
- Do not allow oil or grease to enter blind holes, the hydraulic action resulting from tightening the bolt or stud can split the housing and also give a false torque reading.
- Always tighten a nut, bolt or screw to the specified torque figure, damaged or corroded threads can give a false torque reading.
- Nut and bolt loosening and tightening sequences, where given, must ALWAYS be followed. Distortion of components or faulty sealing of joints will result if the sequences are not followed. Where an instruction is given to tighten in stages, these stages must be adhered to; do not attempt to combine stages particularly where certain stages involve tightening by degrees.
- To check or re-tighten a fixing to a specified torque, first loosen a quarter of a turn, then retighten to the specified torque figure.
- Unless instructed otherwise, do not lubricate bolt or nut threads prior to fitting.

Where it is stated that bolts and screws may be re-used, the following procedures must be carried out:


- Check that threads are undamaged.
- Remove all traces of locking agent from the threads.



ВНИМАНИЕ: DO NOT use a wire brush; take care that threads are not damaged.

- Ensure that threads are clean and free from oil or grease.
- Apply the specified locking agent to the bolt threads.

Bolt and Nut Identification

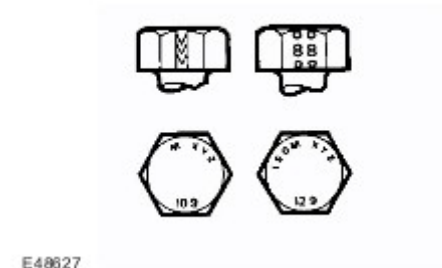

E48627

An ISO metric bolt or screw made of steel and larger than 6 mm in diameter can be identified by either of the symbols ISO M or M embossed or indented on top of the bolt head.

In addition to marks identifying the manufacturer, the top of the bolt head is also marked with symbols indicating the strength grade e.g. 8.8, 10.9, 12.9, 14.9. Alternatively, some bolts and screws have the M and strength grade symbol stamped on the flats of the hexagon.


Encapsulated ('Patched') bolts and screws



E48628

Encapsulated ('patched') bolts and screws have a thread locking agent applied to the threads during manufacture. Most thread locking agents are colored, the band of color extending for 360° around the thread. Some locking agents however, are neutral in color and may not be so easily identified apart from a slightly darker area of thread where the locking agent has been applied. The locking agent is released and activated by the tightening process and is then chemically cured to provide the locking action.

Self-locking bolts and screws

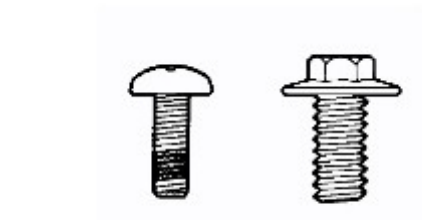

E48629

Unless stated in a specific repair procedure, self-locking bolts and screws i.e. nylon patched or trilobular thread can be re-used provided that resistance is felt when the locking portion enters the female thread.

Nylon patched bolts and screws have a locking agent either applied to, or inserted in the threaded portion. They are identified by the presence of a colored section of thread extending approximately 180° around the thread or by a

colored plug inserted into the bolt.


Trilobular bolts have a special thread form which creates a slight interference with the thread of the hole or nut into which it is screwed.



ВНИМАНИЕ: Do Not re-use self-locking fasteners in critical locations e.g. drive plates/flywheel or engine bearings. Do not fit non self-locking fasteners where a self-locking fastener is specified.

Trilobular bolts should not be used as a substitute for patched bolts.

Nut identification

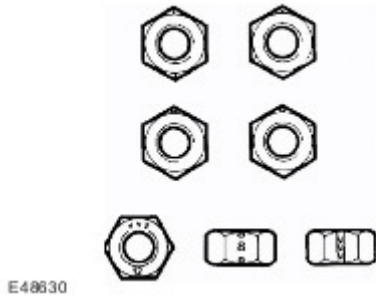

A nut with an ISO metric thread is marked on one face or one of the hexagonal flats with the strength grade symbol 8, 12, 14. Some nuts with the strength grade 4, 5 or 6 are also marked and some have the metric symbol M on the hexagonal flat opposite the strength grade marking.

A clock face system is sometimes used as an alternative method of indicating the strength grade. The external chamfers or a face of the nut is marked in a position relative to the appropriate hour mark on a clock face to indicate the strength grade.

A dot is used to locate the 12 o'clock position and a dash to indicate the strength grade. If the grade is above 12, two dots identify the 12 o'clock position.

When tightening a slotted or castellated nut, never loosen it to insert a split pin except where specified as part of an adjustment procedure. If difficulty is experienced in correctly positioning the slot, alternative washers or nuts should be selected.

Where a nut is tightened to adjust or maintain bearing pre-load, the tightening procedure must be adhered to.

Self-locking nuts

Unless stated in a specific repair procedure, self-locking nuts i.e. those with a nylon insert or deformed thread nuts can be re-used provided that resistance can be felt when the locking portion of the nut passes over the thread of the bolt or stud.

Unless stated otherwise, self-locking nuts once removed must be discarded and new nuts of the same type and strength grade fitted.

Air Suspension

Always ensure that suitable eye protection is worn when working on the air suspension system.


Ball and Roller Bearings

When removing and installing bearings, ensure that the following practices are observed to ensure component serviceability:



ВНИМАНИЕ: Service tools have been developed for removing the majority of bearings; these must always be used where specified.

- Remove all traces from bearing under inspection by cleaning with a suitable degreasant; maintain absolute cleanliness throughout operations.
- Conduct a visual inspection for markings on rolling elements, raceways, outer surfaces of outer or inner surfaces of inner rings. Reject any bearings found to be marked since marking in these areas indicates onset of wear.
- Hold inner race of bearing between finger and thumb of one hand and rotate outer race to check that it revolves absolutely smoothly. Repeat holding outer race and rotating inner race. DO NOT spin the bearing.
- Rotate outer ring gently using a reciprocating movement whilst holding inner ring; feel for any check or obstruction to rotation. Reject bearing if movement is not absolutely smooth.
- Check bearing for blueing or signs of overheating.
- Lubricate bearing with the specified lubricant.
- Inspect bearing surface of shaft and bearing housing for discoloration or other markings which indicate overheating of bearing or movement between bearing and seating.
- Before fitting bearing, ensure that shaft and bearing housing are clean and free from burrs.
- If one bearing of a pair shows signs of wear, overheating etc., it is advisable to replace bearings as a pair unless it is suspected that one bearing may have been faulty when fitted, was fitted incorrectly or the fault arose due to oil seal failure.
- Never refit a bearing unless it is in a fully serviceable condition.

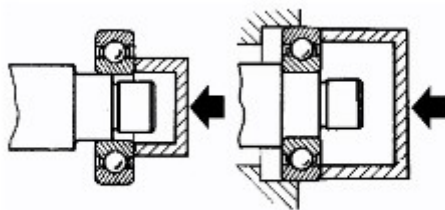

E48560

- When fitting a bearing to a shaft, only apply force to the inner ring of the bearing. When fitting a bearing into a housing, only apply force to the outer ring of the bearing.



ВНИМАНИЕ: Service tools have been developed for fitting the majority of bearings; these must always be used where specified.

- In the case of grease lubricated bearings, fill the space between the bearing and outer seal with the recommended grade of grease before fitting the seal.



ВНИМАНИЕ: When a waxed oil seal (fitted dry) type of oil seal is to be fitted, take great care that grease does not contaminate the running surface of the seal.

- Always make suitable reference marks between the components of separable bearings e.g. taper roller bearings when disassembling to ensure correct location of components when assembling. Never fit new rollers in an outer ring, always fit a new bearing assembly.

Brake Pads and Linings

Always fit the correct grade and specification of brake pads and linings. When replacing these items, always replace as complete axle sets.

Brake Hydraulics

Always observe the following recommendations when working on the braking system:



ПРЕДОСТЕРЕЖЕНИЕ: Do not intermix brake fluid of different specifications.

- Always use two spanners when loosening or tightening brake pipes or hose connections.

- Ensure that hoses run in a natural curve and are not kinked or twisted.
- Fit brake pipes and hoses securely in their retaining clips and ensure that they cannot contact a potential chafing point.
- Containers used for brake fluid must be kept absolutely clean.
- Do not store brake fluid in unsealed containers, the fluid will absorb water which will lower the boiling point of the fluid.
- Do not allow brake fluid to be contaminated with other fluids such as mineral oil and do not put brake fluid in a container which has previously been used for storing other fluids.
- Do not re-use brake fluid which has been bled from the system.
- Always use brake fluid or a suitable brake cleaning fluid to clean hydraulic components.
- Unless stated otherwise, use only clean brake fluid to lubricate hydraulic seals and components.
- Always fit blanking plugs to hoses, pipes or components immediately after disconnection.
- Check thread compatibility of original equipment with replacement components.
- Observe absolute cleanliness when working with hydraulic components.

Pipes and Hoses

When removing or installing flexible hydraulic pipes and hoses, ensure that the following procedures are observed to ensure component serviceability:

- Prior to removal, clean area around hose or pipe end which is to be disconnected.
- Obtain appropriate blanking plugs or caps before disconnecting hose or pipe end fittings in order that connections can be plugged immediately following disconnection.
- Always fit blanking plugs or caps to pipes and unions immediately following disconnection.
- Clean hose or pipe and blow through with an air line.



ПРЕДОСТЕРЕЖЕНИЕ: Suitable eye protection must be worn.

- Check hoses externally for cracks, separation of plies, security of end fittings and external damage; replace faulty hoses.
- Check pipes for signs of corrosion and chafing, replace as necessary.



ВНИМАНИЕ: If pipes are found to be chafed, rectify clips, mounting points etc., to prevent further problems in service.

- When fitting hoses, ensure that no unnecessary bends are introduced and that hoses are not kinked, twisted or positioned close to potential chafing points.
- When fitting pipes, ensure that pipes are positioned and clipped clear of potential chafing points.
- Always replace sealing washers fitted to banjo bolts, sealing plugs etc.
- Always use a backing spanner when tightening unions and do not overtighten union nuts or banjo bolts.
- After engagement of 'quick-fit' connection hoses, perform a 'tug' test to make sure connection is securely fitted.
- After any work on hydraulic systems, always check for fluid leaks whilst a second operator applies working pressure to the brake pedal or operates the system that has been worked on.

Fuel system hoses

Some fuel hoses are made up of two laminations, an armoured rubber outer sleeve and an inner viton core. Whenever a hose is removed, ensure that the inner bore is inspected to check that the viton lining has not become separated from the outer sleeve.



ПРЕДОСТЕРЕЖЕНИЕ: Never attempt to repair fuel hoses or rectify leaking 'quick-fit' connectors. The fuel hose and connectors must be replaced as an assembly.

Fuel system hose clips



E48636

Certain fuel system hose clips are of the 'break-off head' type where a slot in the screw head shears off when the clip is tightened to a specific torque. These clips may be removed using a screwdriver and must be replaced with new clips on reassembly. Clips must be tightened until the portion of the slot shears off. Do not attempt to tighten clips by any other method, do not fit any other type of clip.

'Quick-fit' connections are also installed to certain fuel hoses. After engagement of 'quick-fit' connections, perform a 'tug' test to make sure connection is securely fitted.

Other fuel system hose clips are of the 'Jubilee' type and there may be a tamper proof cover fitted over the screw head. These cover must be carefully removed before slackening the clip and should be replaced after final tightening, ensuring that the internal hexagon on the cover is correctly located on the clip screw.


Cooling system hoses



ВНИМАНИЕ: The following precautions must be observed to ensure that the integrity of the cooling system hoses and their connection to the system is maintained.

Hose orientation and connection


Correct orientation of cooling system hoses is important to ensure that hoses do not become fatigued or damaged through contact with adjacent components.

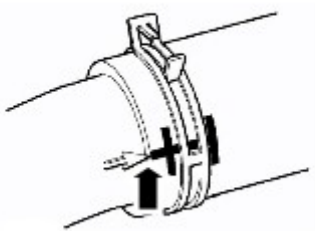

E48633

Where orientation marks are provided on the hose and corresponding component, the marks must be aligned when the hose is fitted. Hoses must be fitted fully on to their connection points, usually a moulded form on a pipe provides a positive indicator.

Hose clips

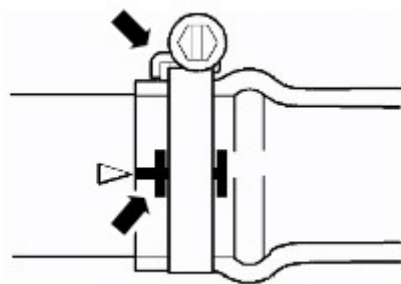

E48634

Markings are usually provided on the hose to indicate the correct clip position. If no markings are provided, position the clip directly behind the retaining lip at the end of the stub pipe. Worm drive clips should be orientated with the crimped side of the drive housing facing towards the end of the hose or the hose may become pinched between the clip and the stub pipe retaining lip. Unless otherwise stated, worm drive clips should be tightened to 3 Nm (2 lb-ft). Ensure that hose clips do not foul adjacent components.



E48635

Oetiker clips may be removed by bending the tag (arrowed) and releasing the free end of the clip. Clips must not be re-used. When fitting new clips, ensure clip is positioned on hose before tightening and ensure that when clip is tightened, the tag is located in the longitudinal slot in the free end of the clip (arrowed in illustration).

'Quick-fit' connections are also installed to certain hoses/pipes. Inspect 'quick-fit' connections for damage, prior to connection. Replace if damaged. After engagement of 'quick-fit' connections, perform a 'tug' test to make sure connection is securely fitted.

Heat protection

Always ensure that heat shields and protective sheathing are in good condition; replace if damage is evident. Particular care must be taken when routing hoses close to hot engine components such as the exhaust manifolds and exhaust gas recirculation (EGR) pipes. Hoses will relax and deflect slightly when hot, ensure this movement is taken into account when routing and securing hoses.

Electrical Precautions

General

The following guidelines are intended to ensure the safety of the operator whilst preventing damage to the electrical and electronic components of this vehicle.

Equipment

Prior to commencing any test procedure on the vehicle, ensure that the relevant test equipment is working correctly and that any harness or connectors are in good condition. It is particularly important to check the condition of all plugs and leads of mains operated equipment.

Polarity

Never reverse connect the vehicle battery and always ensure the correct polarity when connecting test equipment.

High voltage circuits

Whenever disconnecting live ht circuits, always use insulated pliers and never allow the open end of the ht lead to contact other components, particularly ECU's.

Vehicles fitted with Bi-Xenon headlamp bulbs



ПРЕДОСТЕРЕЖЕНИЕ: The following precautions must be observed as failure to comply may result in exposure to ultra-violet rays, severe electric shock, burns or risk of an explosion.

- Safety goggles and gloves must be worn.
- Ensure that headlamps are switched off before removing bulbs.
- Do not touch the glass portion of the bulb.
- On no account should headlamps be switched on with the bulb removed from the headlamp.
- Bulb testing may only be carried out with the bulb fitted in the headlamp.
- Bulbs must be disposed of in accordance with the local authority bye-laws.

Connectors and harnesses

The engine compartment of a vehicle is a particularly hostile environment for electrical components and connectors. Always observe the following:

- Ensure electrically related items are dry and oil free before disconnecting/connecting test equipment.
- Ensure that disconnected multiplugs and sensors are protected from any possible oil, coolant or other liquid contamination. Any such contamination could impair performance or lead to component failure.
- Never force connectors apart or pull on the wiring harness.
- Always ensure locking tabs are disengaged before disconnecting multiplugs etc. and ensure that correct orientation is achieved before connection.
- Ensure that any protection covers, insulation etc. are replaced if disturbed.

Having confirmed that a component is faulty, carry out the following:

- Switch off the ignition and disconnect the battery.
- Remove the component and support the disconnected harness.
- When replacing electrical components, keep oily hands away from electrical connections and ensure that locking tabs on connectors are fully engaged.

Battery Disconnection/Connection

Always refer to the Electrical Section of this manual - Battery Connection/Disconnection prior to attempting to connect or disconnect the battery. Для получения дополнительной информации обратитесь к [Specifications](#) (414-00 Charging System - General Information)

Fuel Handling Precautions

The following information lists basic precautions which must be observed if fuel is to be handled safely. It also outlines other areas of risk which must not be ignored. As this information is issued for basic guidance only, consult your local Fire Department where any doubt as to personal and environmental safety exists - See also Health and Safety Precautions.

General precautions

Always have the correct type of fire extinguisher containing Foam, CO2, Gas or powder accessible when handling or draining fuel or dismantling fuel systems. Fire extinguishers must also be located in areas where fuel is stored.

Ensure that suitable warning signs are exhibited.

Keep all sources of ignition well away from areas where fuel is being handled.

Ensure that any leadlamps are flameproof and kept clear of spillage.



ПРЕДОСТЕРЕЖЕНИЕ: Do not disassemble or reassemble fuel system components whilst vehicle is over a pit.



ПРЕДОСТЕРЕЖЕНИЕ: No one should be permitted to repair components associated with fuel without first having specialist training.

Always disconnect the vehicle battery before carrying out disassembly, reassembly or draining work on a fuel system.

Fuel tank and system draining

Draining must be carried out in accordance with the procedures given in the relevant Fuel System section of this manual.



ПРЕДОСТЕРЕЖЕНИЕ: Never drain fuel or work on a fuel system while the vehicle is over a pit. Extraction or draining of fuel must be carried out in a well ventilated area.



ПРЕДОСТЕРЕЖЕНИЕ: Never switch on or operate mobile (cellular) phones in the vicinity of vehicles when operations are being carried out on the fuel system.



ПРЕДОСТЕРЕЖЕНИЕ: Always attach fuel vapor warning labels to fuel tanks immediately after draining.



ПРЕДОСТЕРЕЖЕНИЕ: Containers used for storing fuel must be clearly marked with the contents and placed in a safe storage area which meets the requirements of the local authority.



ВНИМАНИЕ: Some fuel lines are now fitted with 'quick release' connectors. If a connector is damaged, no attempt must be made to repair the connector, a new fuel line and connector(s) assembly must be fitted.

Always release pipe clips fully before attempting to disconnect fuel pipes.

Fuel tank repairs




ВНИМАНИЕ: No attempt should be made to repair a plastic fuel tank. If the structure of the tank is damaged, a new tank must be fitted.

Oil seals


Always renew oil seals which have been removed either as an individual component or as part of an assembly. Never use a seal which has been improperly stored or handled.

- Take great care when removing old seals that the sealing surfaces and seal housing are not damaged.
- Carefully examine seal before fitting to ensure that it is clean and undamaged.
- Ensure that the surface on which the seal is to run and also the seal housing is clean and free from burrs or scratches. Renew the component if the sealing surface cannot be restored.
- Special tools and protection sleeves are provided for fitting the majority of seals and must be used when specified.

- Many seals are now coated with a protective wax and DO NOT need to be lubricated prior to fitting. Always check the relevant repair procedure which will state if a seal must be fitted dry. Never touch these seals with oily hands as the oil will contaminate the protective coating and affect the sealing properties of the seal; also, ensure that fitting tools and protection sleeves are free from oil and grease. Seals which must be lubricated prior to fitting should have the recommended lubricant applied to the areas specified in the repair procedure.
- Ensure that a seal is fitted the correct way round. For example, the lip of the seal must face towards the lubricant which it is sealing.
- When fitting an oil seal, ensure that it is positioned square to shaft and housing. Where the seal is to be fitted to a housing prior to fitting over a shaft, take care not to allow the weight of an unsupported shaft to rest on the seal.

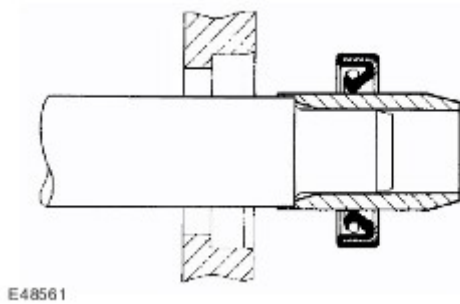

- Always use the recommended special tool and protection sleeve to fit an oil seal. If no tool is specified, use a suitable mandrel approximately 0.4 mm (0.015 in) smaller than the outside diameter of the seal. Use adhesive tape on the shaft to protect the sealing lip of the seal.

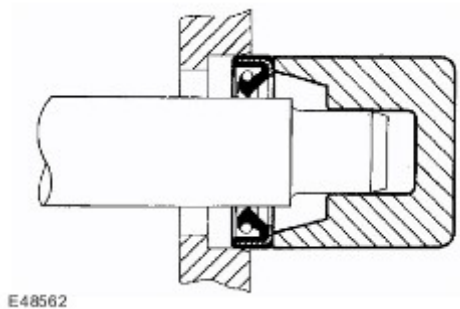

- Press or drift the seal in to the depth of its housing if the housing is shouldered or flush with the face of the housing where no shoulder is provided. Ensure that the seal is not tilted in the housing when it is fitted.

Supplementary Restraint System (SRS) Precautions



ПРЕДОСТЕРЕЖЕНИЕ: Do not fit rear facing child seats in the front passenger seat.

The SRS contains components which are potentially hazardous to service personnel if not handled correctly. The following guidelines and precautions are intended to alert personnel to potential sources of danger and emphasise the importance of ensuring the integrity of the SRS components fitted to the vehicle.



ПРЕДОСТЕРЕЖЕНИЕ: The following precautions MUST be adhered to when working on the SRS system:

- The correct procedures must always be used when working on SRS components.
- Persons working on the SRS system must be fully trained and have been issued with the safety guidelines.
- The airbag modules contain extremely flammable and hazardous compounds. Contact with water, acids or heavy metals may produce harmful or explosive results. Do not dismantle, incinerate or bring into contact with electricity before the unit has been deployed.
- Always replace a seat belt assembly that has withstood the strain of a severe vehicle impact or if the webbing shows signs of fraying.
- Allow a period of 10 minutes to elapse after disconnecting the battery before undertaking any work on

the SRS system.

- Always disconnect the vehicle battery before carrying out any electric welding on a vehicle fitted with an SRS system.



ВНИМАНИЕ: Do not expose airbag modules or seat belt pre-tensioners to temperatures exceeding 85° C (185° F).

It should be noted that these precautions are not restricted to operations performed when servicing the SRS system. The same care should be exercised when working on ancillary systems and components located in the vicinity of SRS components; these include but are not limited to:

- Steering wheel airbag, clock spring.
- Passenger front airbag.
- Head airbag modules - front and rear.
- Seat belt pre-tensioners.
- SRS harnesses, link leads and connectors.
- Side curtain air bags.

Making the system safe

Before working on or in the vicinity of SRS components, ensure the system is rendered safe by performing the following operations:

- Remove the ignition key.
- Disconnect the battery, earth lead first.
- Wait 10 minutes for the SRS power circuit to discharge before commencing work.

ПРИМЕЧАНИЕ:

The SRS uses energy reserve capacitors to keep the system active in the event of electrical supply failure under crash conditions. It is necessary to allow the capacitors sufficient time to discharge (10 minutes) in order to avoid the risk of accidental deployment.

Installation

In order to ensure system integrity, it is essential that the SRS system is regularly checked and maintained so that it is ready for effective operation in the event of a collision. Carefully inspect SRS components before installation. Do not install a part that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.



ПРЕДОСТЕРЕЖЕНИЕ: The integrity of the SRS systems is critical for safety reasons. Ensure the following precautions are always adhered to:

- Do not fit accessories or other objects to trim panels which cover airbags.
- Never install used SRS components from another vehicle or attempt to repair an SRS component.
- When repairing an SRS system, only use genuine new parts.
- Never apply electrical power to an SRS component unless instructed to do so as part of an approved test procedure.
- Special fixings are necessary for installing an airbag module – do not use other fixings and ensure that all fixings are tightened to the correct torque.
- Always use new fixings when replacing an SRS component.



ВНИМАНИЕ: Take care not to trap airbag modules when fitting interior trim components.



ВНИМАНИЕ: Ensure SRS components are not contaminated by oil or grease.

ПРИМЕЧАНИЕ:

Following seat belt pre-tensioner deployment, the seat belts can still be used as conventional seat belts but will need to be replaced as soon as possible to ensure full SRS protection.

ПРИМЕЧАНИЕ:


If the SRS components are to be replaced, the part number/bar code of the new unit must be recorded.

SRS component testing precautions

The SRS components are triggered using relatively low operating currents, always adhere to the following :



ПРЕДОСТЕРЕЖЕНИЕ: Never use a multimeter or other general purpose equipment on SRS components. Use only T4 to diagnose system faults.

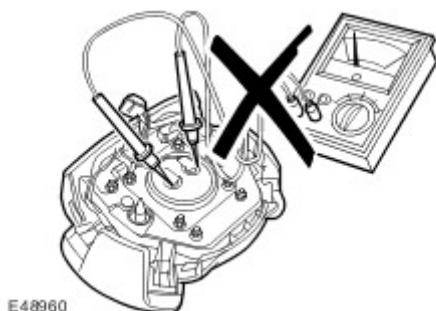

ПРЕДОСТЕРЕЖЕНИЕ: Do not use electrical test equipment on the SRS harness while it is connected to any of the SRS components, it may cause accidental deployment and injury.

Handling and storage

Always observe the following precautions when handling SRS components:



- Never drop an SRS component. The airbag diagnostic control unit is a particularly shock sensitive device and must be handled with extreme care. Airbag modules and seat belt pre-tensioners could deploy if subjected to a strong shock.
- Never wrap your arms around an airbag module. If a module has to be carried, hold it by the cover with the cover uppermost and the base away from your body.
- Never transport airbag modules or seat belt pre-tensioners in the passenger compartment of a vehicle. Always use the luggage compartment of the vehicle for carrying airbag modules and seat belt pre-tensioner units.
- Never attach anything to an airbag cover or any trim component covering an airbag module. Do not allow anything to rest on top of an airbag module.
- Always keep components cool, dry and free from contamination.
- Never apply grease or cleaning solvents to seat belt pre-tensioner units, component failure could result.
- Always store an airbag module with the deployment side uppermost. If it is stored deployment side down,

accidental deployment will propel the airbag module with sufficient force to cause serious injury.

- Keep new airbag modules in their original packaging until just prior to fitting. Place the old module in the empty packaging for carriage.



ПРЕДОСТЕРЕЖЕНИЕ: When handling any SRS component, hold by the gas generator housing, **DO NOT** hold by the airbag. Do not wrap the thumb around the gas generator while holding. Do not drape airbag over shoulder or around neck. For seat buckle type pre-tensioners, hold by the piston tube, with the open end of the piston tube pointing towards the ground and the buckle facing away from your body. Do not cover the end of the piston tube. **DO NOT** hold buckle type pre-tensioners by the bracket assembly or cable. Never point the piston tube towards your body or other people.



ПРЕДОСТЕРЕЖЕНИЕ: Airbag modules and seat belt pre-tensioners are classed as explosive devices. For overnight and longer term storage, they must be stored in a secure steel cabinet which has been approved as suitable for the purpose and has been registered with the local authority.




ПРЕДОСТЕРЕЖЕНИЕ: Store airbag modules or seat belt pre-tensioners in a designated storage area. If there is no designated storage area available, store in the locked luggage compartment of the vehicle and inform the workshop supervisor.



ВНИМАНИЕ: Improper handling or storage can internally damage the airbag module making it inoperative. If you suspect the airbag module has been damaged, install a new module and refer to the deployment/disposal procedures for disposal of the damaged module.

SRS harness and connectors


Always observe the following precautions with regards to SRS system electrical wiring:

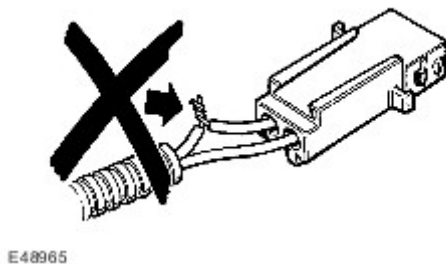

- Never attempt to modify, splice or repair SRS wiring.
- Never install electrical equipment such as a mobile telephone, two-way radio or in-car entertainment system in such a way that it could generate electrical interference in the airbag harness. Seek specialist advice when installing such equipment.

ПРИМЕЧАНИЕ:


SRS wiring can be identified by a special yellow outer sleeve protecting the wires (black with yellow stripe protective coverings are sometimes used).

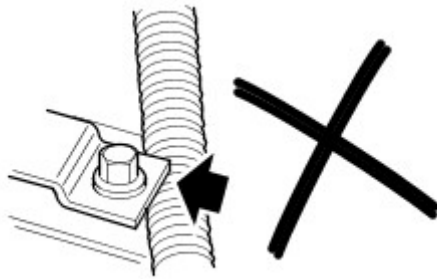

E48964



ПРЕДОСТЕРЕЖЕНИЕ: Always ensure SRS wiring is routed correctly. Be careful to avoid trapping or pinching the SRS wiring.

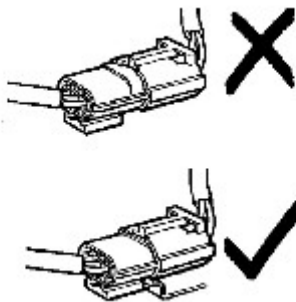

E48966



ПРЕДОСТЕРЕЖЕНИЕ: Do not leave the connectors hanging loose or allow SRS components to hang from their harnesses. Look for possible chafing points.

Impact crash sensors - inspection

After any degree of side or frontal body damage, inspect the impact crash sensors. Replace a crash sensor if there is any sign of damage.



ВНИМАНИЕ: Take extra care when painting or carrying out bodywork repairs in the vicinity of the crash sensors. Avoid direct exposure of the crash sensors or link harnesses to heat guns, welding or spraying equipment. Take care not to damage sensor or harness when refitting components.

Clock spring



ВНИМАНИЕ: Always follow the procedure for fitting and checking the clock spring as instructed in the SRS repairs section. Comply with all safety and installation procedures to ensure the system functions correctly. Observe the following precautions:

- Do not unlock and rotate the clock spring when it is removed from the vehicle.
- Do not turn the road wheels when the clock spring is removed from the vehicle.
- Always ensure the clock spring is removed and installed in its central position and with the front road wheels in the straight ahead position - refer to SRS repair section for the correct removal and installation procedure.
- If a new clock spring is being installed, ensure the locking tab holding the spring's rotational position is not broken; units with a broken locking tab must not be used.

Airbag and pre-tensioner deployment



ПРЕДОСТЕРЕЖЕНИЕ: During deployment parts of the airbag module become hot enough to burn you. Wait 30 minutes after deployment before touching the airbag module.

Deployment procedures and precautions as detailed in this manual should be strictly adhered to. Only personnel who have undergone the appropriate training should undertake deployment of airbag and pre-tensioner modules. The following precautions must be complied with:

- Only use deployment equipment approved for the intended purpose.
- Deployment of airbag / pre-tensioner modules must be performed in a well ventilated area which has been designated for the purpose.
- Ensure airbag / pre-tensioner modules are not damaged or ruptured before attempting to deploy.
- Where local legislation exists, notify the relevant authorities of intention to deploy airbag and pretensioner units.
- When deploying airbag pre-tensioner units, ensure that all personnel are at least 15 metres (45 feet) away from the deployment zone.
- Ensure deployment tool is connected correctly, in compliance with the instructions detailed in the SRS section of this manual. In particular, ensure deployment tool is NOT connected to battery supply before connecting to airbag module connector.
- When deploying seat belt pre-tensioners, ensure pre-tensioner unit is secured correctly to the seat.
- When removing deployed airbag modules and pre-tensioner units, wear protective clothing. Use gloves and seal deployed units in a plastic bag.
- Following deployment of any component of the SRS system within the vehicle, all SRS components must be replaced. DO NOT re-use or salvage any parts of the SRS system.
- Do not lean over an airbag module when connecting deployment equipment.

If a vehicle is to be scrapped, undeployed airbag modules and pre-tensioner units must be manually deployed. In this case airbags can be deployed in the vehicle. Before deployment, ensure the airbag module is secure within its correct mounting position. Deployment of the driver's airbag in the vehicle may damage the steering wheel; if the vehicle is not being scrapped, deploy the module outside of the vehicle.

SRS Component Replacement Policy



ВНИМАНИЕ: The Restraints Control Module (RCM) will log a crash fault after every impact which is severe enough to cause airbag deployment. It is possible to have three crashes/impacts logged after one event where, for example, a front, side and rollover has occurred. After the third fault is logged, the SRS warning lamp will be illuminated and the restraints control module (RCM) must be replaced.



ВНИМАНИЕ: The SRS side/front impact sensor(s) must be replaced if there are any signs of physical damage or if the restraints control module (RCM) is registering a fault.

The following information details the policy for replacement of SRS components as a result of a vehicle accident.

Impacts which do not deploy the airbags or pre-tensioners

Check for structural damage in the area of the impact paying particular attention to bumper armatures, longitudinals and bracketry.

Impacts which deploy the airbags or pre-tensioners

The replacement and inspection policy is dependent on the type and severity of the crash condition. The following guidelines are the minimum that should be exercised as a result of the deployment of specific SRS components.

Check for structural damage in the area of impact paying particular attention to bumper armatures, longitudinals and bracketry.

Front Airbag Deployment - Driver and Passenger



ВНИМАНИЕ: If the front airbags are deployed, the following components must be replaced:

- Driver airbag module
- Passenger airbag module
- Fly leads (where applicable) connecting front airbag modules to SRS harness
- Front seat belt buckle pre-tensioner
- Rear seat belt pre-tensioners - if fitted
- Driver's seat belt retractor - if fitted
- Clock spring
- Any front impact sensors that have been physically damaged or if a fault is being registered
- Restraints control module (RCM) if the three crashes/impacts have been stored

Additionally, the following items must be inspected for damage and replaced as necessary:

- Front passenger's seat belt retractor and webbing, tongue latching function, 'D' loop and body anchorage point
- Rear seat belt buckles, webbing, buckle covers, body anchorage points and tongue latching function
- Instrument panel moulding adjacent to passenger airbag module
- Steering wheel
- Front seat frames and head restraints
- Steering column - if adjustment is lost or if there are signs of collapse
- Seat belt height adjusters
- Rear seat belts

Side Air Bags



ВНИМАНИЕ: If the side curtain air bags are deployed, the following components must be replaced on the side of the vehicle on which the deployment occurred:

- Side curtain airbag
- Any side impact sensors that have been physically damaged or if a fault is being registered
- Restraints Control Module (RCM) if the three crashes/impacts have been stored

Additionally, the following items must be inspected for damage and replaced as necessary:

- Front seat belts, retractors and webbing, tongue latching function, 'D' loop and body anchorage points
- Rear seat belt buckles, webbing, buckle covers, tongue latching function, and body anchorage points
- Front seat frame and head restraints
- Door trim casing
- Seat belt height adjusters
- Rear seat belts

Head airbag modules



ВНИМАНИЕ: If the head airbag modules are deployed, the following components must be replaced on the side of the vehicle on which the deployment occurred:

- Head airbag modules
- Link lead between airbag gas generator and restraints control module (RCM) harness
- Airbag retaining clips
- Internal trim finisher
- Front seat belt buckle pre-tensioners
- Any side impact sensors that have been physically damaged or if a fault is being registered
- Restraints Control Module (RCM) if the three crashes/impacts have been stored

Additionally, the following items must be inspected for damage and replaced as necessary:

- Headlining
- Component mounting brackets

- Front seat belts, retractors and webbing, tongue latching function, 'D' loop and body anchorage points
- Rear seat belt buckles, webbing, buckle covers, tongue latching function, and body anchorage points
- Adjacent trim components
- Seat belt height adjusters

Rear impacts



ВНИМАНИЕ: If the seat belt pre-tensioners are deployed during a rear impact, the following components must be replaced:

- Seat belt pre-tensioners
- Front and rear seat belt retractors used during the impact
- Restraints Control Module (RCM) if the three crashes/impacts have been stored

Additionally, the following items must be inspected for damage and replaced as necessary:

- Seat belt height adjusters
- Front seat belts, retractors and webbing, tongue latching function, 'D' loop and body anchorage points
- Rear seat belt buckles, webbing, buckle covers, tongue latching function, and body anchorage points

(A/C) System Precautions

The A/C system contains fluids and components which could be potentially hazardous to the service engineer or the environment if not serviced and handled correctly. The following guidelines are intended to alert the service engineer to potential sources of danger and emphasise the importance of ensuring the integrity of the A/C operating conditions and components fitted to the vehicle.

Where necessary, additional specific precautions are detailed in the relevant sections of this Manual and also in the Health and Safety Section. These precautions must be referred to prior to commencing repair operations.

The refrigerant used in the A/C system is HC-134a (Hydrofluorocarbon) R134a.



ПРЕДОСТЕРЕЖЕНИЕ: Servicing must only be carried out by personnel familiar with both the vehicle system and the charging and testing equipment. All operations must be carried out in a well ventilated area away from open flame and heat sources.



ПРЕДОСТЕРЕЖЕНИЕ: R134a is a hazardous liquid and when handled incorrectly can cause serious injury. Suitable protective clothing, consisting of face protection, heat proof gloves, rubber boots and rubber apron or waterproof overalls, must be worn when carrying out operations on the A/C system.

Remedial actions



ПРЕДОСТЕРЕЖЕНИЕ: Due to its low evaporating temperature, R134a must be handled with care. R134a splashed on any part of the body will cause immediate freezing of that area. Also, refrigerant cylinders and replenishment trolleys when discharging will freeze skin to them if contact is made.

If an accident involving R134a should occur, conduct the following remedial actions:

- If liquid R134a enters the eye, do not rub it. Gently run large quantities of eye wash over affected eye to raise the temperature. If an eye wash is not available, cool, clean water may be used to flush the eye. After rinsing, cover the eye with a clean pad and seek immediate medical attention.
- If liquid R134a is splashed onto the skin, run large quantities of water over the affected area to raise the temperature. Implement the same action if the skin comes in contact with discharging cylinders. Wrap the contaminated body parts in blankets (or similar materials) and seek immediate medical attention.
- If the debilitating effects of inhalation of R134a vapour are suspected, seek fresh air. If the affected person is

unconscious, move them away from the contaminated area to fresh air and apply artificial respiration and/or oxygen and seek immediate medical attention.

Service precautions

Observe the following precautions when handling components used in the system:

- A/C units must not be lifted by their hoses, pipes or capillary lines.
- Hoses and lines must not be subjected to any twist or stress; the efficiency of the system will be impaired by kinks or restrictions. Ensure that hoses are correctly positioned before tightening couplings, and ensure that all clips and supports are utilised.
- Flexible hoses should not be positioned closer than 100 mm (4.0 in) to the exhaust manifold unless protected by heat shielding.
- Completed assemblies must be checked for refrigeration lines touching metal panels. Any direct contact of components and panels may transmit noise and so must be eliminated.
- The appropriate torque wrench must be used when tightening refrigerant connections to the stipulated value. An additional spanner must be used to hold the union to prevent twisting of the pipe when tightening connections.
- Before connecting any hose or pipe, ensure that refrigerant oil is applied to the seat of the new 'O' rings, **BUT NOT** to the threads of the connection.
- All protective plugs or caps must remain in place in the component until immediately prior to connection.
- Ensure components are at room temperature before uncapping/unplugging, to prevent condensation of moisture from the air that enters it.
- When disconnecting, immediately plug or cap all pipes to prevent ingress of dirt and moisture into the system.
- Components must not remain uncapped/unplugged, if a system has been left uncapped/unplugged for 24 hours or longer, a new receiver/drier must be fitted.
- The receiver/drier contains desiccant which absorbs moisture. It must be positively sealed at all times. A receiver/drier that has been left uncapped for longer than 24 hours must not be used; fit a new unit.
- The receiver/drier should be the last component connected to the system to ensure optimum dehydration and maximum moisture protection of the system.
- Whenever a component of the refrigeration system is replaced, it will also be necessary to fit a new receiver/drier unit.
- Use alcohol and a clean lint-free cloth to clean dirty connections.
- Ensure that all new parts fitted are marked for use with R134a.
- When a major repair has been completed, a leak test should be conducted; refer to the Repairs Section of this manual for the correct procedure.

Refrigerant oil



ВНИМАНИЕ: Refrigerant oil (ND-8 PAG) easily absorbs water and must not be stored for long periods. Do not pour unused refrigerant oil back into the container. Always use an approved refrigerant oil.

When replacing components in the system, drain the refrigerant oil from the component being replaced into a graduated container. On assembly, add the quantity of refrigerant oil drained to the new component - See Compressor Replacement in this Section.

A/C Compressor

A new compressor is sealed and pressurised with Nitrogen gas. When fitting a new compressor, slowly release the sealing cap; gas pressure should be heard to vent as the seal is broken.



ВНИМАНИЕ: A new compressor should always be sealed and could be pressurised with nitrogen gas. To avoid possible oil loss, release the sealing cap(s) slowly. Do not remove the cap(s) until immediately prior to connecting the pipes to the compressor.

Rapid refrigerant discharge

If the A/C system is damaged as a result of an accident and the system is punctured, the refrigerant will discharge rapidly. The rapid discharge of refrigerant will also result in the loss of most of the oil from the system. The compressor must be removed and all the remaining oil in the compressor drained and refilled as instructed in the air conditioning section of this manual.

Precautions for refrigerant recovery, recycling and recharging

When the A/C system is recharged, any existing refrigerant is first recovered from the system and recycled. The system is then charged with the required weight of refrigerant and volume of refrigerant oil.



ПРЕДОСТЕРЕЖЕНИЕ: Refrigerant must always be recycled before re-use to ensure that the purity of the refrigerant is high enough for safe use in the system. Recycling should always be carried out with equipment which is design certified by Underwriter Laboratory Inc. for compliance with SAE J1991. Other equipment may not recycle refrigerant to the required level of purity.



ВНИМАНИЕ: A R134a Refrigerant Recovery Recycling Recharging Station must not be used with any other type of refrigerant. Refrigerant R134a from domestic and commercial sources must not be used in motor vehicle systems.



ВНИМАНИЕ: The system must be evacuated immediately before recharging commences. Delay between evacuation and recharging is not permitted.

A/C Compressor Replacement

A new compressor is supplied filled with a full charge (X cm³) of refrigerant oil.

A calculated quantity of oil must be drained from the new compressor before fitting. To calculate the quantity of oil to be drained:

- Remove the drain plug from the old compressor.
- Invert the compressor and gravity drain the oil into a calibrated measuring cylinder. Rotate the compressor clutch to ensure the compressor is completely drained.
- Note the quantity of oil drained (Y cm³).
- Calculate the quantity of oil to be drained from the new compressor using the following formula: $X \text{ cm}^3 - (Y \text{ cm}^3 + 20 \text{ cm}^3) = Q \text{ cm}^3$
- Remove the drain plug from the new compressor and drain Q cm³ of oil. Fit and tighten the compressor drain plug.

Vehicle Weights

Item	kg	lb
Maximum Gross Vehicle Weight (GVW) - All models*	3230	7106
Maximum weight of unbraked trailer:		
On-road	750	1650
Off-road	750	1650
Maximum towable weight (mass) - Trailers with overrun brakes		
On-road	3500	7700
Off-road	1000	2205
Maximum roof rack load (Including the mass of the roof rack):		
On-road	75	110
Off-road	75	110

* Weight quoted is the maximum weight possible for vehicles in this model range; weights may be less for certain variants depending upon trim level, territorial requirements etc.

Vehicle Dimensions

Item	mm	in
Length - including number plate plinth - All models	4842	190,6
Width - All models:		
Mirrors extended	2189	86,2
Mirrors folded	2009	79,1
Coil Suspension - Maximum height - At EEC kerb weight - All models:		
With roof rack and rails	1891	74,4
With roof antenna module	1938	76,3
Air Suspension - Maximum height - At normal ride height - All models:		
With roof rack and rails	1891	74,4
With roof antenna module	1938	76,3
Wheelbase - All models	2885	113,5
Front overhang - All models	820	32,3
Rear overhang - All models	1130	44,5
Maximum roof load	75 kg	165 lb
Track - All models:		
Front	1601	63,0
Rear	1601	63,0
Coil Suspension:		
Underbody - Running clearance to exhaust - Minimum - Kerb weight	185	7,3
Front axle to axle undertray clearance	203	7,9
Rear axle to differential casing clearance	214	8,4
Air Suspension:		
Underbody - Running clearance to exhaust - Minimum - Kerb weight	185	7,3
Front axle to axle undertray clearance	203	7,9
Rear axle to differential casing clearance	214	8,4
Suspension articulation - All models:		
Front	255	10,03
Rear	330	12,9
Coil Suspension:		
Wading depth	600	23,6
Approach angle	32.2°	32.2°
Departure angle - Towbar NOT fitted:		
With full size spare wheel	24.9°	24.9°
With space saver wheel	26.7°	26.7°
Departure angle - Towbar fitted - NOT NAS vehicles	15.7°	15.7°
Departure angle - Towbar fitted - NAS vehicles	18°	18°
Departure angle - Adjustable height towbar fitted	14°	14°
Air Suspension:		
Wading depth - Off-road height	700	27,5
Approach angle:		
Standard ride height	32.2°	32.2°
Off-road ride height	37.2°	37.2°
Departure angle - Towbar NOT fitted - Standard ride height:		
With full size spare wheel	24.9°	24.9°

With space saver wheel	26.7°	26.7°
Departure angle - Towbar NOT fitted - Off-road ride height:		
With full size spare wheel	27.9°	27.9°
With space saver wheel	29.5°	29.5°
Departure angle - Towbar fitted - NOT NAS vehicles:		
Standard ride height	15.7°	15.7°
Off-road ride height	18.5°	18.5°
Departure angle - Towbar fitted - NAS vehicles:		
Standard ride height	18°	18°
Off-road ride height	21°	21°
Departure angle - Adjustable height towbar fitted:		
Standard ride height	14°	14°
Off-road ride height	16.6°	16.6°
Ramp angle - Coil Suspension	22.8°	
Ramp angle - Air Suspension		
Standard ride height	22.8°	22.8°
Off-road ride height	27.9°	27.9°